

06 JUL 1992

TABLE 2-3PERMISSIBLE ACTION CODE/STATUS CODE COMBINATIONS

<u>ACTION CODE</u>	<u>APPLICABLE STATUS CODES</u>
"A"	BX0, BA0, VF0.
"E"	Any version of status codes D__, E__, F__, or J__.
"F"	Any version of status codes D__, E__, F__, J__, W__, M__, N__, P__, S__, or Y__.
"G"	Any version of status codes A__.
"H"	Same as "G" above.
"M"	If the aircraft undergoes conversion because of depot level maintenance involvement, use appropriate SDLM/CILOP or conversion status codes (i.e., D40 or G1_). The new model designation series will be reported on the first XRAY reporting the aircraft entering the rework process. If model designation change is directed by administrative action, <u>no depot level rework involved</u> , use the status code as currently reported.
"R"	Use any status code appropriate to aircraft situation.
"S"	1S0, 2S0, 3S0, 4S0.
"X"	Use any appropriate status code.
"Y"	Use any appropriate status code.